![EiRA logo] A Step Ahead

User Manual

HDMI KVM EXTENDER

HDMI KVM EXTENDER OVER CAT6 (70M) POC

ER2663KVM

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE
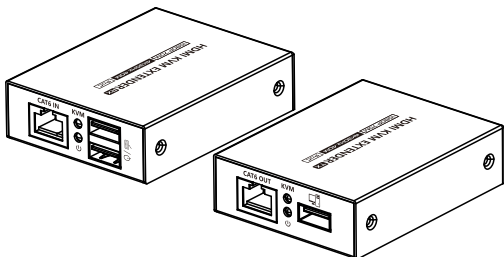
· **Important Safety Notice**

1. Do not disassemble the device to repair during the working process to avoid electric shock.
2. Please cut off the power before installation. Live installation may damage the equipment.
3. Do not expose the devices to rain, moisture and liquid.
4. Use a 5V/2A DC adapter only. Make sure the specification matched if using 3rd party DC adapters.

· **Introduction**

This HDMI KVM Extender includes a transmitter and a receiver, allows the HDMI signal to be transmitted up to 70 meters at 1080p resolution using a Cat6/6A/7 network cable. It adopts a point–to–point connection configuration, supports KVM. It is perfect for outdoor advertising, monitor system, home entertainment, conference, etc.

· **Features**

1. Zero latency.
2. Support up to 4K@30Hz resolution.
3. Support CAT6/6A/7 network cables, 1080p@60Hz transmission distance is up to 70meters, 4K@30Hz transmission distance is up to 40 meters.
4. Support KVM function.
5. Support HDR10.
6. Support PoC network cable power supply, only TX power supply is needed.
7. Automatically adjusts parameters to match different network cables and achieve the best display performance.
8. Plug and play.

· **Package Contents**

Transmitter
x1pc

Receiver
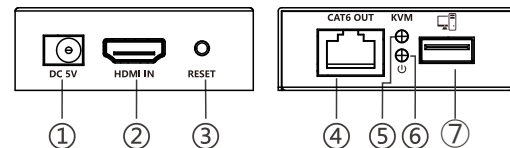x1pc

5V/2A
x1pc

User manual
x1pc

USB Cable
x1pc

· **Installation Requirements**

1. HDMI source device (DVD, game console, set top box, PC, etc.)
2. HDMI display device like TV, projector with HDMI port.
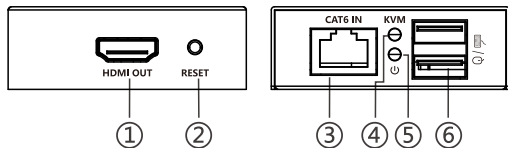3. UTP/STP Cat6/6A/7 cable, follow standard IEEE-568B.

· **Interfaces**

1. Transmitter (TX)

DC 5V   HDMI IN   RESET   CAT6 OUT   KVM

① ② ③   ④ ⑤ ⑥ ⑦

①	DC 5V	Connect with 5V/2A power adapter
②	HDMI Input	Connect with HDMI source device
③	Reset Button	Press the button to restart the device
④	RJ45 Output	Connect with CAT6/6A/7 network cable
⑤	KVM Indicator	a) Light off: the USB port and the computer have not established a connection b) Steady on: the USB port is connected to the computer, but no KVM data is transmitted c) Light flash: the KVM data is transmitting
⑥	Power Indicator	a) Light flash: it is powered on, but no video data is transmitted b) Steady on: the video data is transmitting
⑦	USB-A Port	Connect to the computer with USB cable

2. Receiver (RX)

| ①	HDMI Output	Connect with HDMI display device
②	Reset Button	Press the button to restart the device
③	RJ45 Input	Connect with CAT6/6A/7 network cable
④	KVM Indicator	a) Light off: the USB port and the computer have not established a connection b) Steady on: the USB port is connected to the computer, but no KVM data is transmitted c) Light flash: the KVM data is transmitting
⑤	Power Indicator	a) Light flash: it is powered on, but no video data is transmitted b) Steady on: the video data is transmitting
⑥	USB-A Port	Connect to the mouse and keyboard

· **Installation Procedures**

1. The network cable should follow the standard of IEEE-568B. It is recommended to select a network cable with less loss and crosstalk.

1-Orange/white   2-Orange   3-Green/white

4-Blue   5-Blue/white   6-Green

7-Brown/white   8-Brown

2. Connection
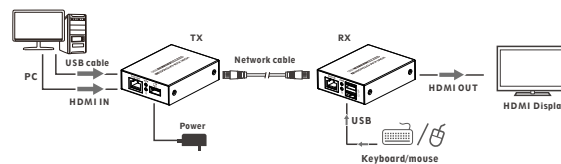
3. Connection instruction

1) Connect the HDMI port of the source device to the HDMI IN port of the transmitter via an HDMI cable.

2) Connect the CAT6 OUT port of the transmitter and the CAT6 IN port of the receiver via a network cable.

3) Connect the HDMI port of the display device to the HDMI OUT port of the receiver via an HDMI cable.

4) Use the USB cable to connect the computer to the transmitter, and connect the mouse and keyboard to the USB port of the receiver.

5) Plug the power into the devices to get started.

• **FAQ**

QWhy there is no image/image or sound is not played smoothly?

APress the "RESET" button of the receiver to restart the device. 1
   2Reconnect the devices with a shorter network cable.

QWhy does the power indicator always flashes?

ACheck whether the network cable is uses IEEE-568B wiring 1
     standards.
   2Check whether the source device and the transmitter are
     connected well.
   3Reset the transmitter or receiver and connect it again.

QWhy does the receiver's power indicator stays on but there is no
    image output?

APress the "RESET" button of the receiver to restart the device. 1
   2Check whether the display device and the receiver are connected
     well.
   3Reconnect the network cable or re-power the receiver.

· **Specification**

Items		Specification
Power Supply	Voltage/Current	DC5V/2A (only TX power supply is needed)
	Power consumption	TX+RX 10W
HDMI Performance and Interface	HDMI compliance	HDMI 1.4
	HDCP compliance	HDCP 1.4

HDMI Performance and Interface	HDMI resolution	800x600, 1024x768, 1280x720, 1280x960, 1366x768, 1440x900, 1680x1050, 1920x1080, 480i@60Hz, 480p@60Hz, 576i@50Hz, 576p@50Hz, 720p@50/60Hz, 1080i@50/60Hz, 1080p@24/25/30/50/60Hz, 3840x2160@24/25/30Hz
	Audio formats	DTS, DTS-HD, PCM, LPCM
	HDR	Supported
	Input and output TMDS signal	0.7~1.2Vp-p(TMDS)
	Input and output DDC signal	5Vp-p(TTL)
Transmission Distance	Cat6/6A/7	1080p@60Hz transmission 70 meters 4K@30Hz transmission 40 meters
Protection Level	ESD	Implementation of the standard: IEC61000-4-2 1a Contact discharge level 2 (±4KV 1b Air discharge level 3 (±8KV)
Operating Environment	Working temperature	-20~60℃
	Storage temperature	-30~70℃
	Humidity (no condensation)	0~90%RH
Body Properties	Dimension	75.0(L) x 60.0(W) x 20(H) mm
	Weight	Tx: 123g RX: 123g
	Color	Black

Disclaimer

The product name and brand name may be registered trademark of related manufactures. ™ and ® may be omitted on the user manual. The pictures in this user manual are just for reference. The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.